


Figure 1

Syringe arrangement for drawing up the sample

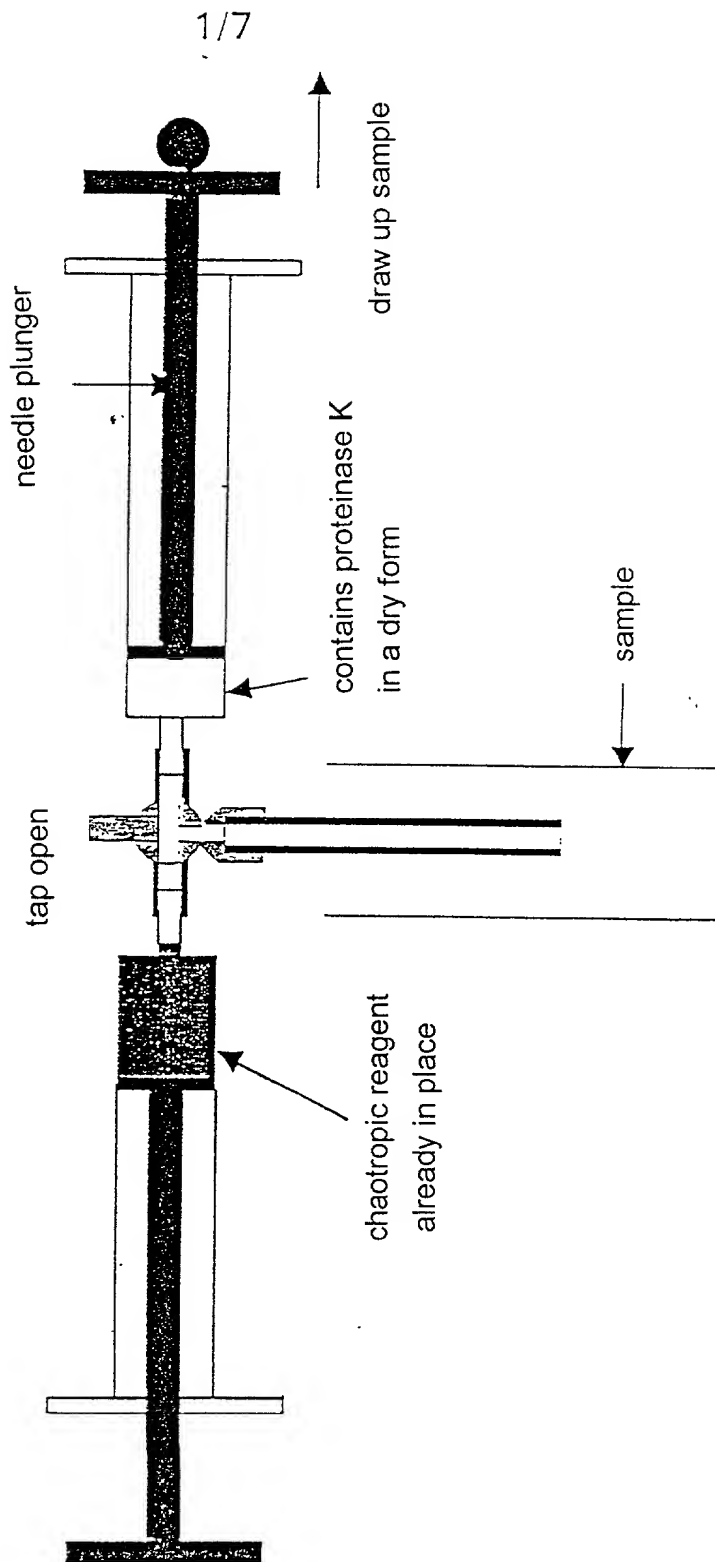

105020 90203/60

Figure 2

Mixing

2/7

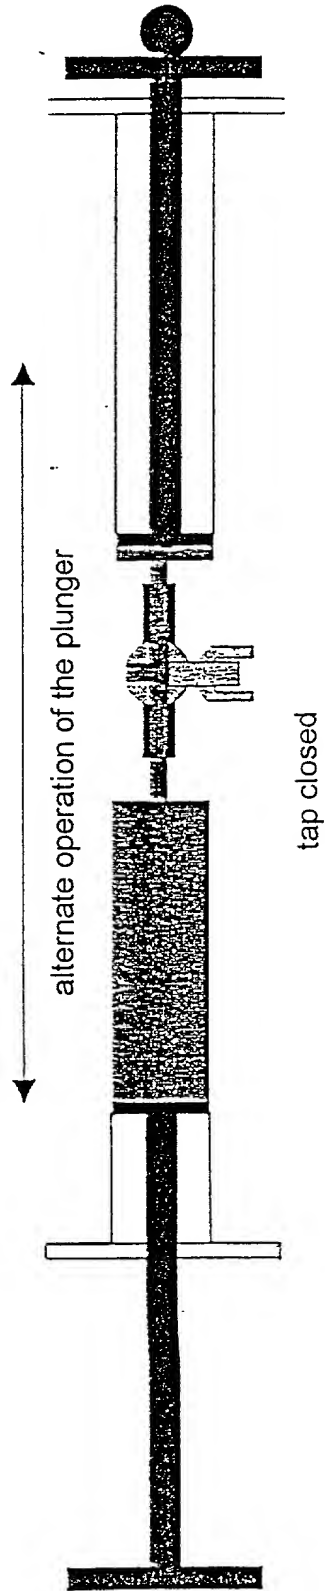


Figure 3

Binding of NA to the inner wall of the capillary

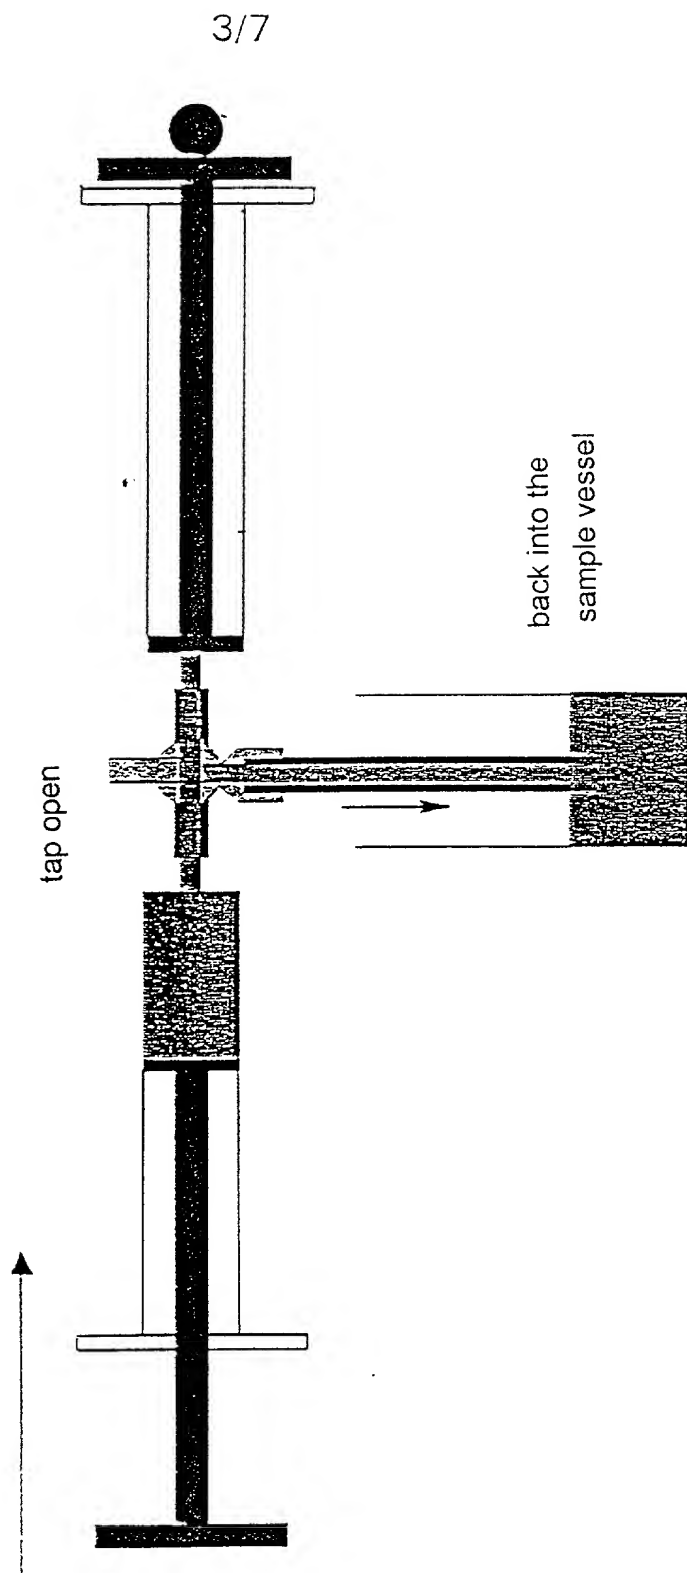


Figure 4

Washing by aspirating washing buffer once

Waschpuffer

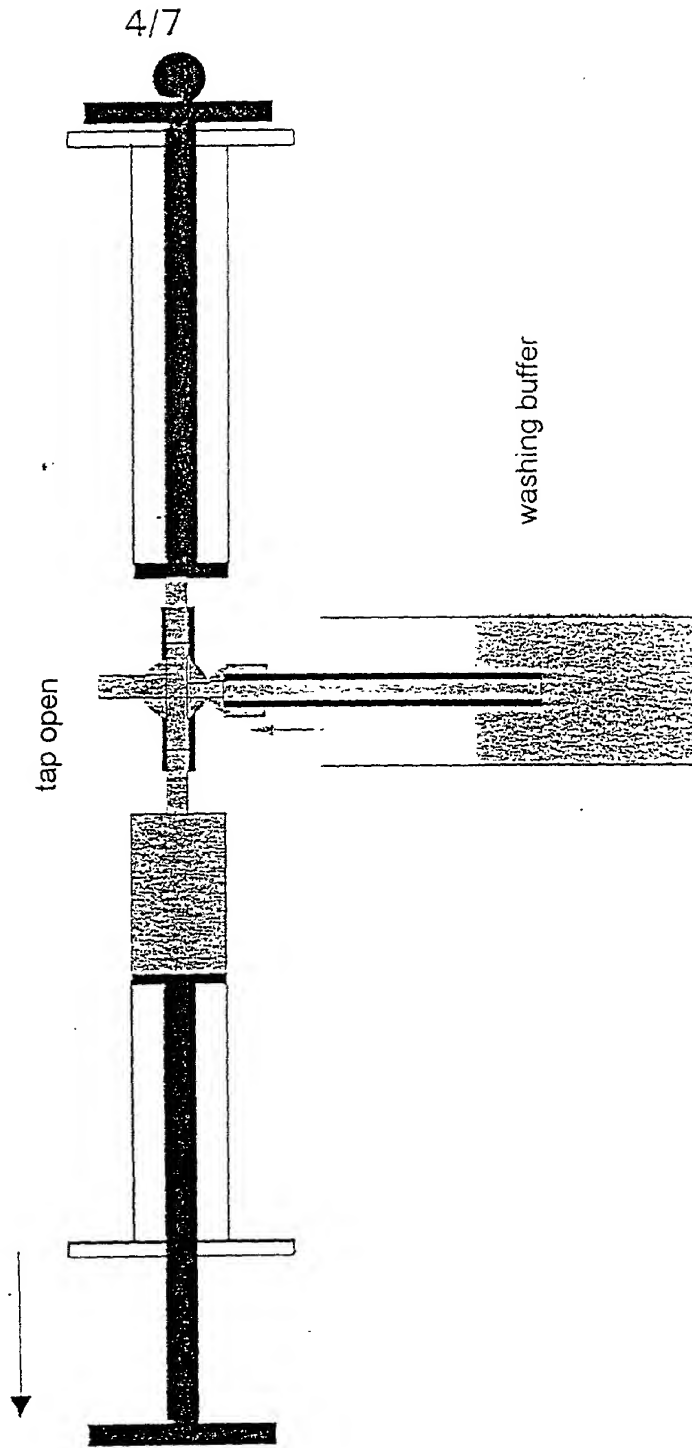


Figure 5

Drying by slowly aspirating air


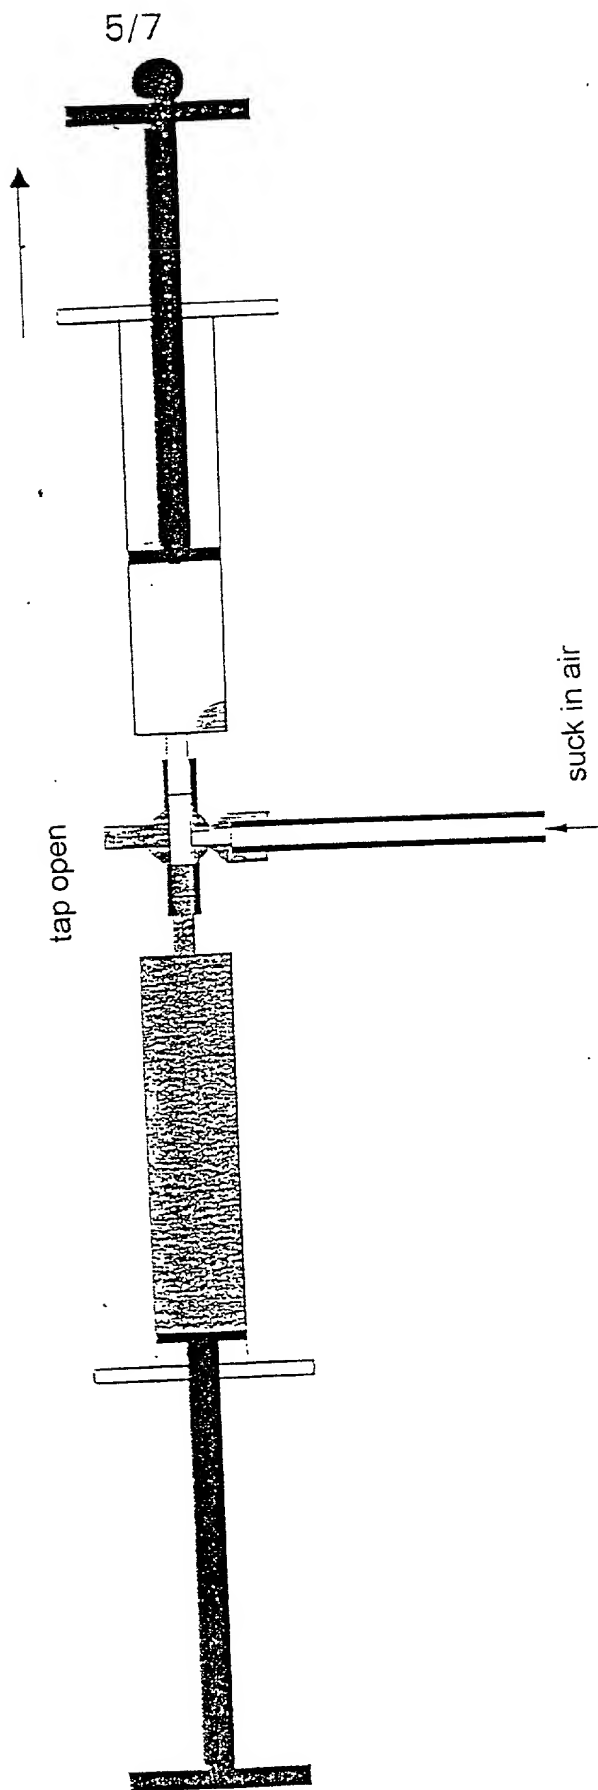


Figure 6

Uptake of master mix

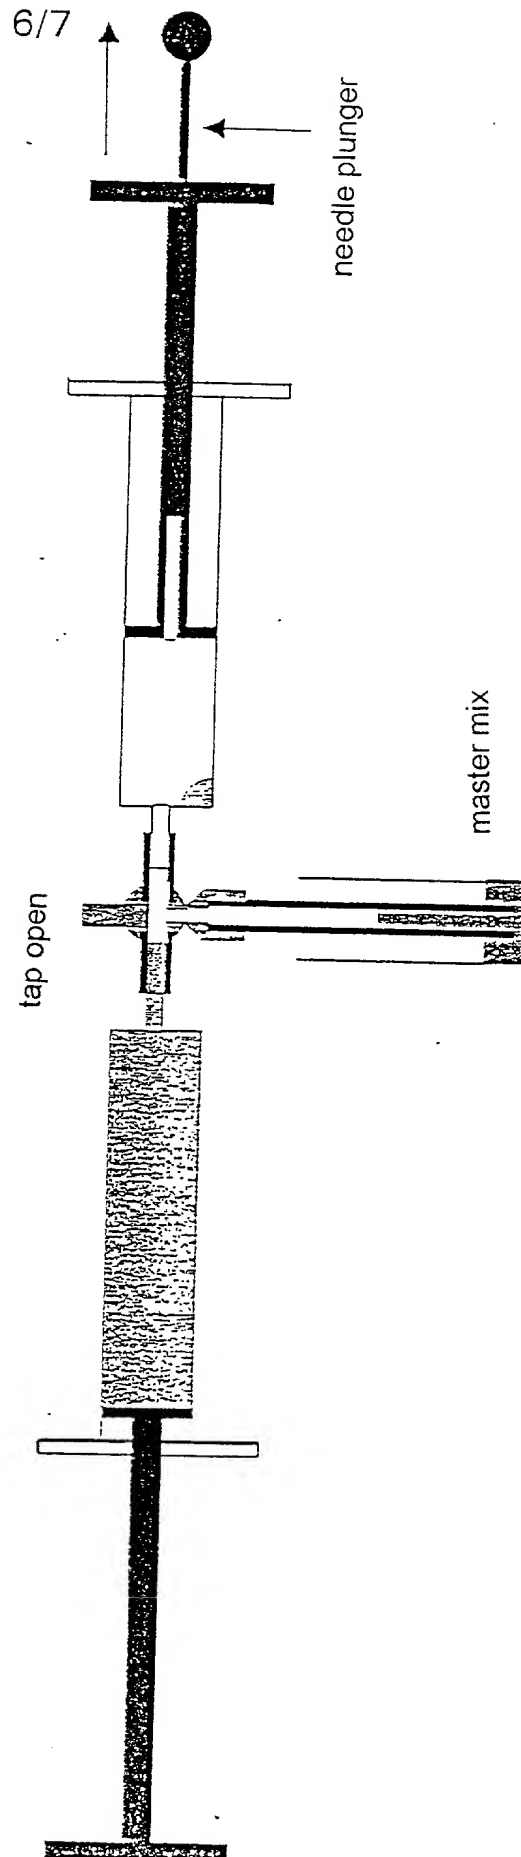

105020" 90203/60

Figure 7

Amplification and detection

